

# **Model Number**


SJ5-K-N


## **Features**

• 5 mm slot width


Technical Data		
General specifications		
Switching element function		NAMUR, NC
Slot width		5 mm
Depth of immersion (lateral)		8 10 mm , typ. 9 mm
Installation		
Output polarity		NAMUR
Nominal ratings		
Nominal voltage	Uo	8.2 V (R <sub>i</sub> approx. 1 kΩ)
Operating voltage	UB	5 25 V
Switching frequency	f	0 2000 Hz
Hysteresis	Н	0.05 0.3 mm
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤1 mA
Functional safety related parame	ters	
MTTF <sub>d</sub>		4560 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Mechanical specifications		
Connection type		cable PVC , 2 m
Core cross-section		0.75 mm <sup>2</sup>
Housing material		PBT
Degree of protection		IP67
General information		
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 1D
Compliance with standards and	directive	
Standard conformity		
NAMUB		EN 60947-5-6:2000
NAMOIT		IEC 60947-5-6:1999
Standards		EN 60947-5-2:2007
Standards		IEC 60947-5-2:2007
Approvals and certificates		
FM approval		
Control drawing		116-0165F
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		CCC approval / marking not required for products rated ≤36 V
CCC approvar		$CCC$ approval/ marking not required for products rated $\leq 36$ V

## Dimensions

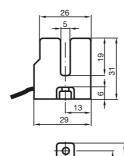

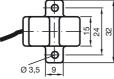

# **Electrical Connection**

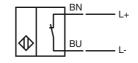

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

Inductive slot sensor	SJ5-K-N
ATEX 1G	
Instruction	Manual electrical apparatus for hazardous areas
Device exterent 10	
Device category 1G	for use in hazardous areas with gas, vapour and mist
EC-Type Examination Certificate	PTB 99 ATEX 2219 X
CE marking	$C \in O102$
ATEX marking	🐼 II 1G Ex ia IIC T6T1 Ga
Directive conformity	94/9/EG
Standards	EN 60079-0:2012, EN 60079-11:2012, EN 60079-26:2007
	Ignition protection "Intrinsic safety"
	Use is restricted to the following stated conditions
Appropriate type	SJ5-K
Effective internal capacitance Ci	$\leq$ 50 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 550 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!
Ambient temperature	The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related appara- tus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met. Install the device in such a way that the resin surface is not exposed to mechanical hazards.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Created conditions	

Special conditions Protection from mechanical danger

Electrostatic charge

When used in the temperature range below -20  $^\circ C$  the sensor should be protected from knocks by the provision of an additional housing.

When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts. Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1. Additional requirements for gas group IIC. Avoid electrostatic charges that can cause electrostatic discharge when installing or operating the device.

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



## Inductive slot sensor

#### ATEX 2G

Instruction

### Device category 2G EC-Type Examination Certificate

CE marking

ATEX marking Directive conformity Standards

Appropriate type Effective internal capacitance Ci Effective internal inductance Li General

Ambient temperature

Installation, commissioning

Maintenance

#### Special conditions

Protection from mechanical danger

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist PTB 99 ATEX 2219 X €0102

⟨ы⟩ II 1G Ex ia IIC T6…T1 Ga 94/9/EG EN 60079-0:2012, EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions SJ5-K...  $\leq$  50 nF ; a cable length of 10 m is considered.

 $\leq$  550  $\mu$ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. Install the device in such a way that the resin surface is not exposed to mechanical hazards.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.



3

### ATEX 1D

Instruction

### Device category 1D EC-Type Examination Certificate CE marking

ATEX marking

Directive conformity Standards

Appropriate type Effective internal capacitance Ci Effective internal inductance Li General

Maximum housing surface temperature

Installation, commissioning

Maintenance

Special conditions Electrostatic charge Manual electrical apparatus for hazardous areas

for use in hazardous areas with combustible dust ZELM 03 ATEX 0128 X €0102

(Ex) II 1D Ex iaD 20 T 108 °C (226.4 °F)

94/9/EG IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD' Use is restricted to the following stated conditions SJ5-K..

 $\leq$  50 nF ; a cable length of 10 m is considered.

 $\leq$  550  $\mu$ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The maximum surface temperature of the housing is given in the EC-Type Examination Certificate

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

The intrinsically safe circuit has to be protected against influences due to lightning. When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

The connection cables are to be laid in accordance with EN 50281-1-2 and must not normally be subjected to chaffing during use.

SJ5-K-N

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

