

## ABCOR™ FEG PLUS™ MODULE: 10-HFM-251-PVI

Tubular Ultrafiltration One-Inch Modules for Industrial Applications

PRODUCT DESCRIPTION

KMS Part Number (KPN):0711651Membrane Chemistry:PVDF

Membrane Type:HFM (neutral)Membrane Area:2.2 ft² (0.20 m²)

Molecular Weight Cut-off: 100,000 Dalton (nominal)

Housing Construction: CPVC

Seal: CPVC Insert (Epoxied in Place)

Gasket: Viton®

Interconnecting Components: See second page

OPERATING AND DESIGN

**INFORMATION\*** 

Maximum Inlet Pressure: 90 psi @ 140°F (6.2 bar @ 60°C)

Minimum Outlet Pressure: 5 psi (0.3 bar)
Maximum Operating Temperature (at pH 8.0): 140°F (60°C)
Maximum Permeate Side Back Pressure: 5 psi (0.3 bar)

Maximum Feed Side Pressure Drop: 10 psi @ 140°F (0.7 bar @ 60°C) Allowable pH - Continuous Exposure: 2.0 - 10.0 @ 140°F (60°C) Allowable pH - Short Term Exposure: 1.5 - 10.5 @ 140°F (60°C)


<sup>\*</sup> Consult KMS Process Technology for specific applications.

<b>FEED FLOW</b>	VS.
PRESSURE	
DROP**	

Circulation Flow		Crossflow Velocity		Pressure Drop	
gpm	m³/hr	fps	m/s	psi	bar
19	4.3	7.8	2.4	2.0	0.14
30	6.8	12.3	3.7	4.3	0.30
38	8.6	15.5	4.7	6.0	0.41


<sup>\*\*</sup> Data based on Water at 77° F (25°C) and specific gravity of 1.0. Circulation rates exhibit variances of 15%.

# NOMINAL DIMENSIONS

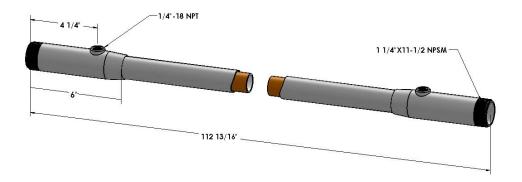

#### **ANCILLARY PARTS**

KMS recommends that these membranes be used with KMS supplied ancillary parts. Sealing is provided by o-rings and gaskets. No additional sealing compound or tape is recommended for use on threaded connections.

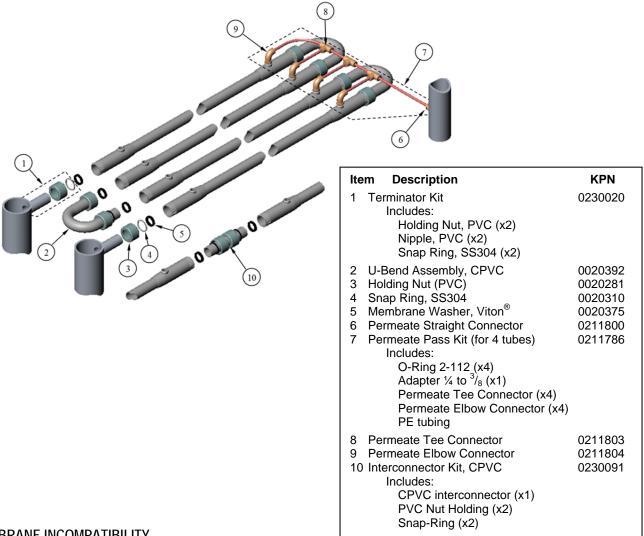

#### MEMBRANE INCOMPATIBILITY

Prior to exposing the membrane to any chemical, the chemical should be reviewed by Koch Membrane Systems. Aside from the listed chemicals below, synthetic coolants, semi-synthetic coolants, kerosenes, naphtha, gasoline, floc polymers may affect membrane performance.

### Chemicals that should be avoided include the following:

- Aprotic Solvent (e.g., Dimethyl Formamide, Dimethyl Acetamide, N-Methyl Pyrolidine, etc.)
- Chlorinated Solvents (e.g., Methylene Chloride, Chloroform, Carbon Tetrachloride, etc.)
- Ketones (e.g., Acetone, Diacetone Alcohol, etc.)
- Silicones or Silicone based Defoamers (e.g., Siloxane)

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information.

#### Koch Membrane Systems, Inc., www.kochmembrane.com

Corporate Headquarters: 850 Main Street, Wilmington, Massachusetts 01887-3388, US, Tel. Toll Free: 1-888-677-5624, Telephone: 1-978-694-7000, Fax: 1-978-657-5208 European Headquarters: Koch Chemical Technology Group Ltd., Units 3-6, Frank Foley Way, Stafford ST16 2ST, GB, Telephone: +44-178-527-2500, Fax: +44-178-522-3149

· Aachen DE · Lyon FR · Madrid ES · Milan IT · Wijnegem BE · Beijing & Shanghai CN · Mumbai & Chennai IN · Melbourne & Sydney AU · Singapore · Sao Paulo BR · Manama BH ·

The FLOW LINES DESIGN, FEG PLUS and ABCOR are trademarks of Koch Membrane Systems, Inc., and the STYLIZED K is a trademark of Koch Industries, Inc. Viton® is a registered trademark of DuPont Dow Elastomers, LLC.